
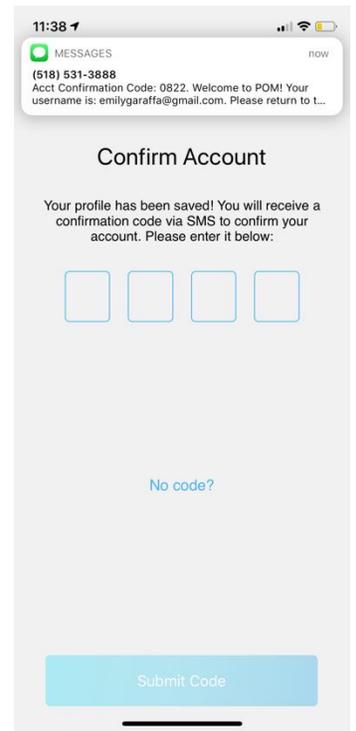
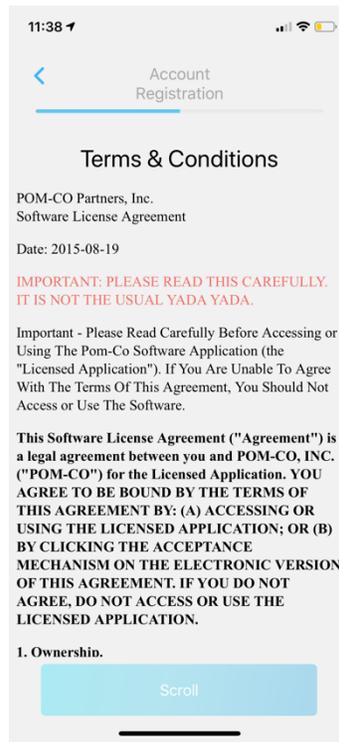
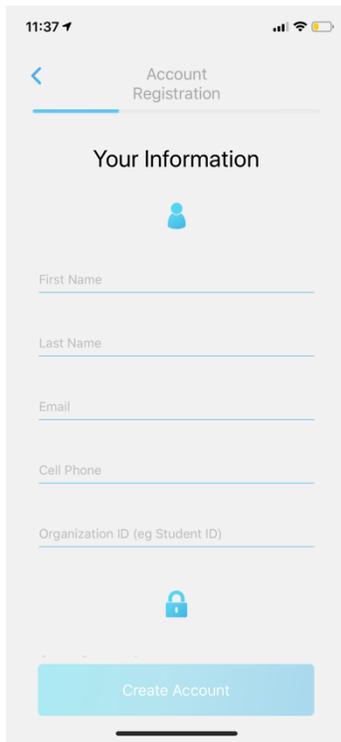






# iPHONE CONNECTION PROCESS

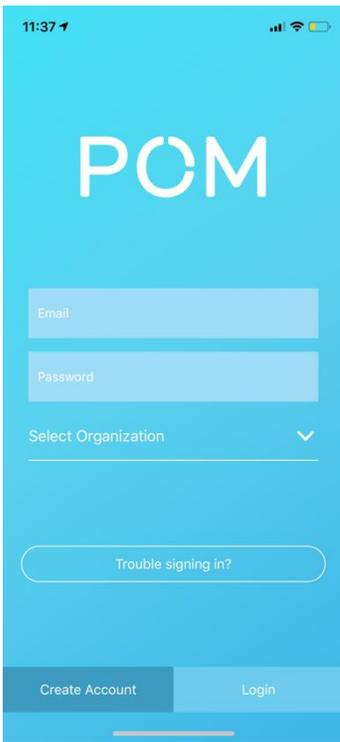

Fill out your information above to begin

Read & scroll through the terms of conditions

Enter the 4 digit code that is sent to you (text/email)

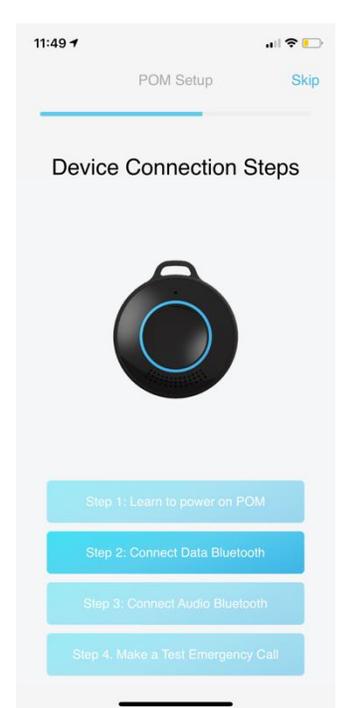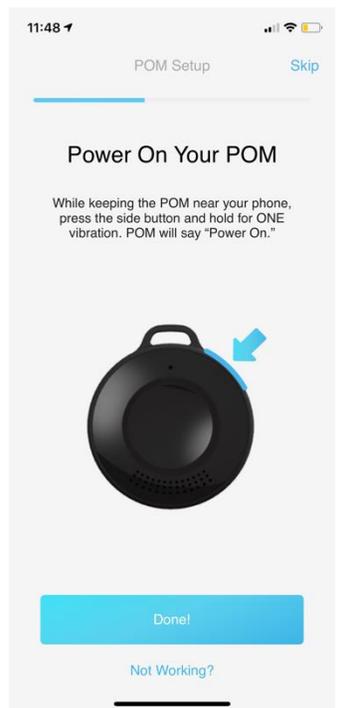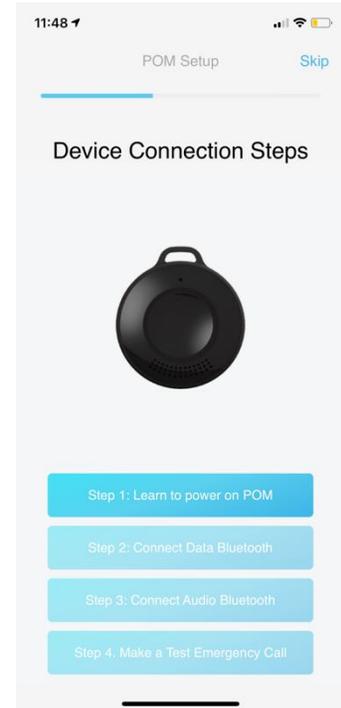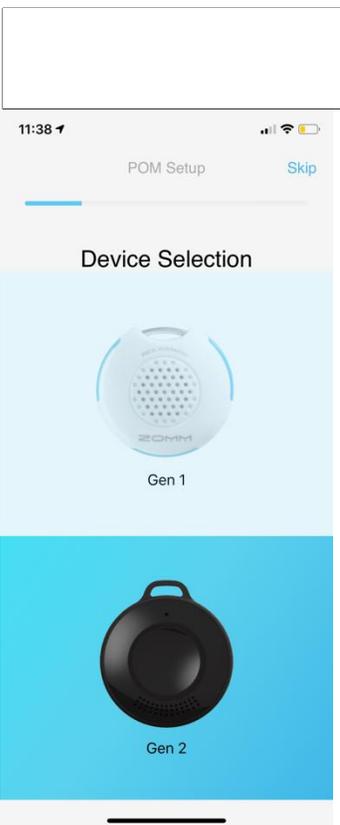


Click on the blue screen to begin connecting your POM


Learn how to turn the POM on- step 1

Turn the POM on and proceed


After clicking 'done', move on to step 2

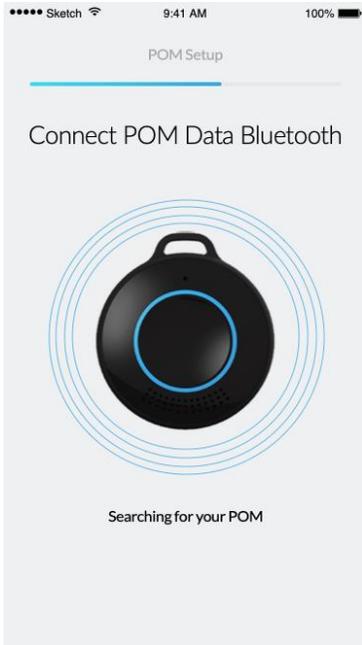


The App will begin to search for your POM

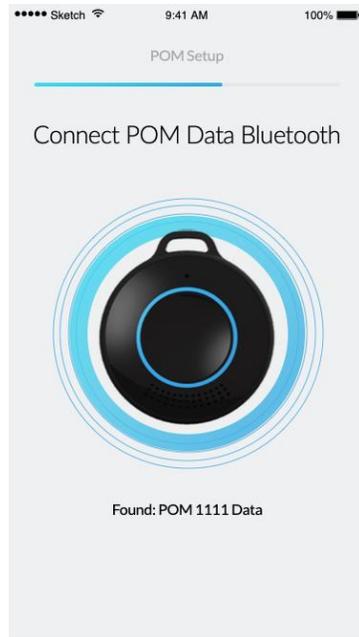

Once the POM is found, your phone will attempt to connect to it

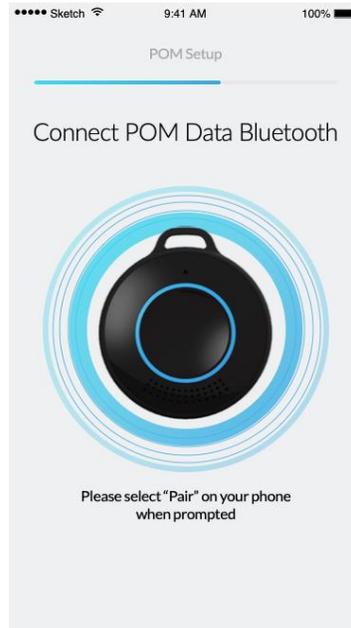


As the phone attempts to connect, you'll be asked to pair the two via a push notification

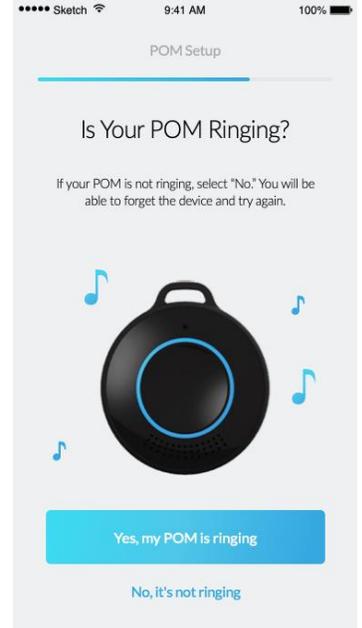


After connecting the POM to your phone, it will ring




Step three is for the audio Bluetooth connection

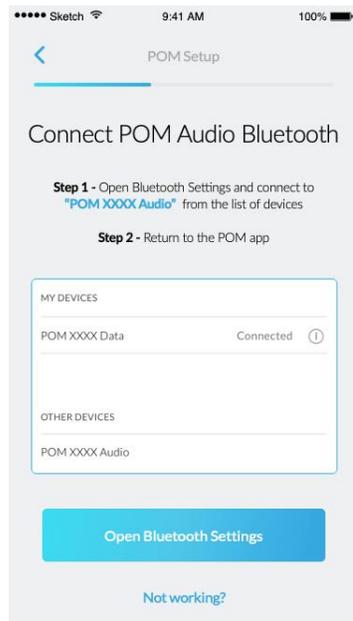

Click on Open Bluetooth Settings

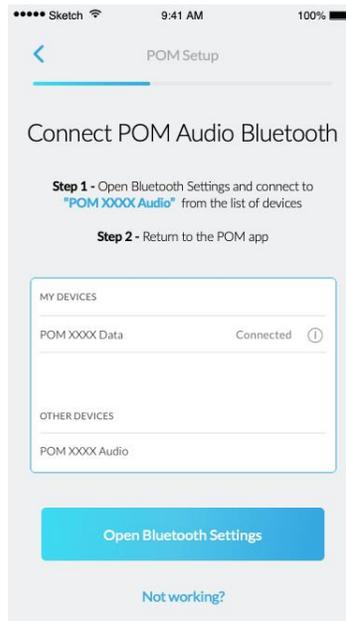

Make sure to click POM xxxx Audio. The same 4 letters/numbers should match the data bluetooth

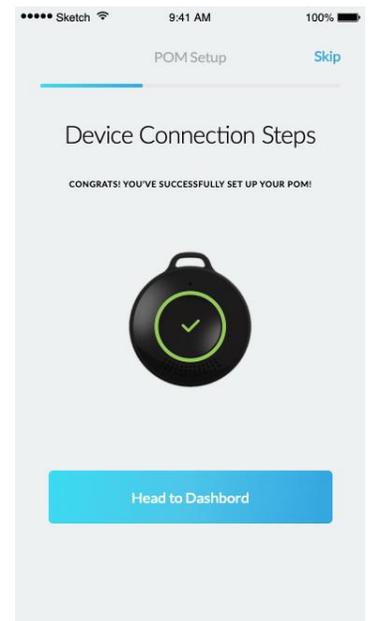

Head back to your app and you're good to go!